GrillBOSS

A WARNING

- A For Outdoor Use Only (outside any enclosure).
- A This grill is for outdoor use only, and should not be used in a building, garage or any other enclosed area.
- A Do NOT operate, light or use this appliance within ten feet (3.05 m) of walls, structures or buildings.
- A This grill is NOT intended for and should never be used as a heater. TOXIC fumes can accumulate and cause asphyxiation.
- A Do NOT use grill for indoor cooking. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
- A Do NOT use gasoline, kerosene or alcohol for lighting.
- A Never touch grates, ashes or coals to see if they are hot.
- A Do NOT use on wooden decks, wooden furniture or other combustible surfaces.
- A Do NOT use in or on boats or recreational vehicles.
- A Position grill so wind cannot carry ashes to combustible surfaces.
- A Do NOT use in high winds.
- A Do NOT leave a lit grill unattended, and especially keep children and pets away from grill at all times.
- A Do NOT attempt to move grill when in use. Allow the grill to cool before moving or storing.
- Always place your grill on a hard, non-combustible, level surface. An asphalt or blacktop surface may not be acceptable for this purpose.
- A Do NOT remove the ashes until they are completely and fully extinguished.
- A Live hot briquettes and coals can create a fire hazard.
- A Death, serious injury or damage to property may occur if the above is not followed exactly.